

Technical Note

03-TN-0050, Revision 1, 2011-12-09

OdaStat-E to G Upgrade Program

Customer Information

This document provides details of the operation of the OdaStat-E to G Upgrade Program (OSEtoG_Updater.exe)

Step 1


Copy or download the OSEtoG_Updater.exe file to your C:\ drive.

Step 2

Double click the OSEtoG_Updater.exe file in "My Computer" to begin executing the program.


Step 3

The window below will appear. Click "Next"

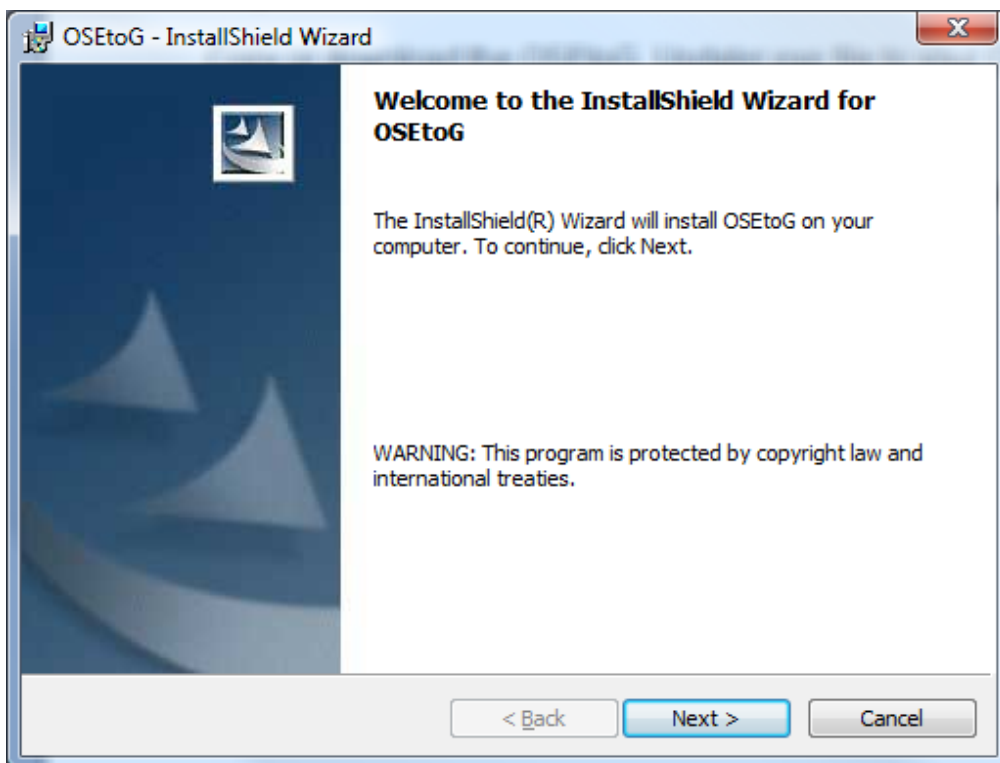


Step 4

The License Agreement window below will appear. Click "I accept" and then "Next"

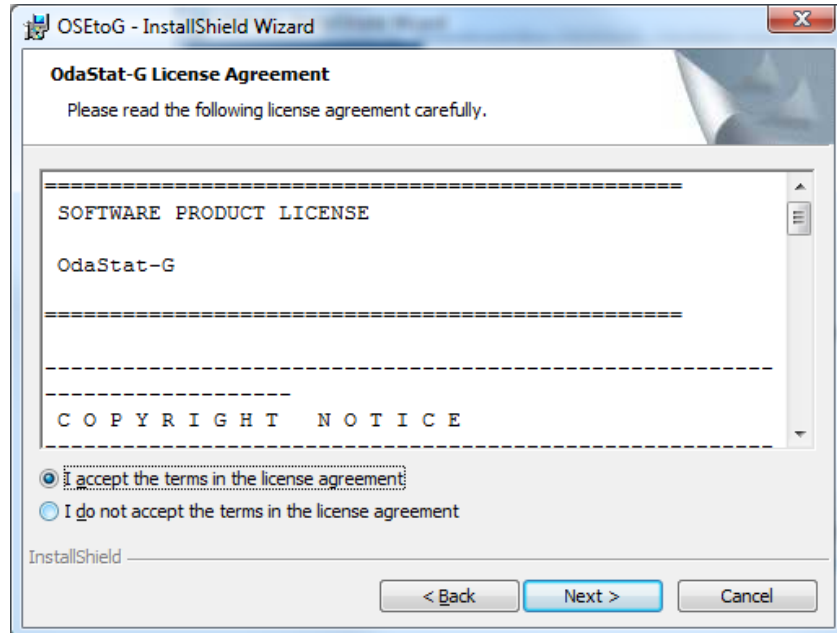


Step 5

The window below will appear. Click "Install"

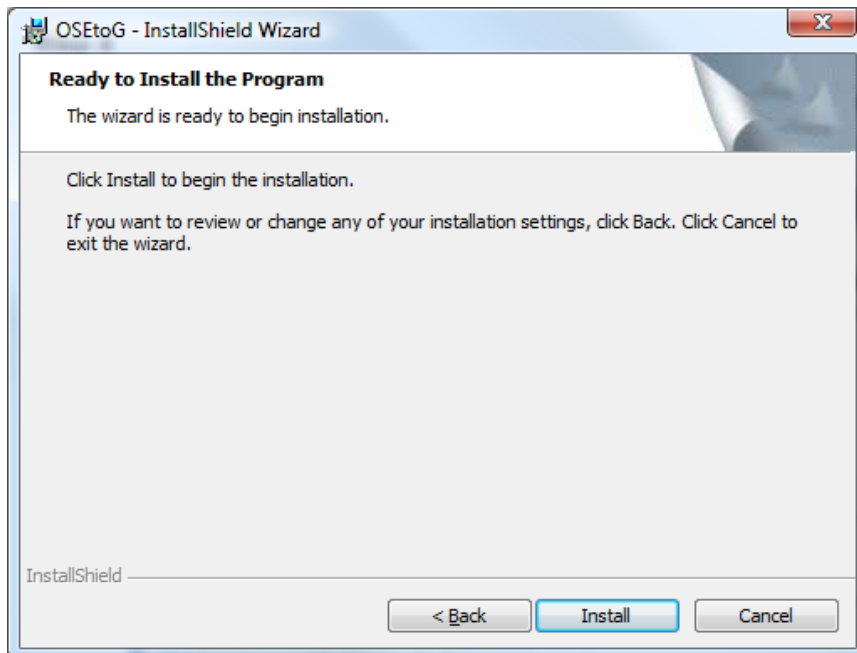


Step 6

The window below will appear while the updater program is being installed on your C:\ drive.

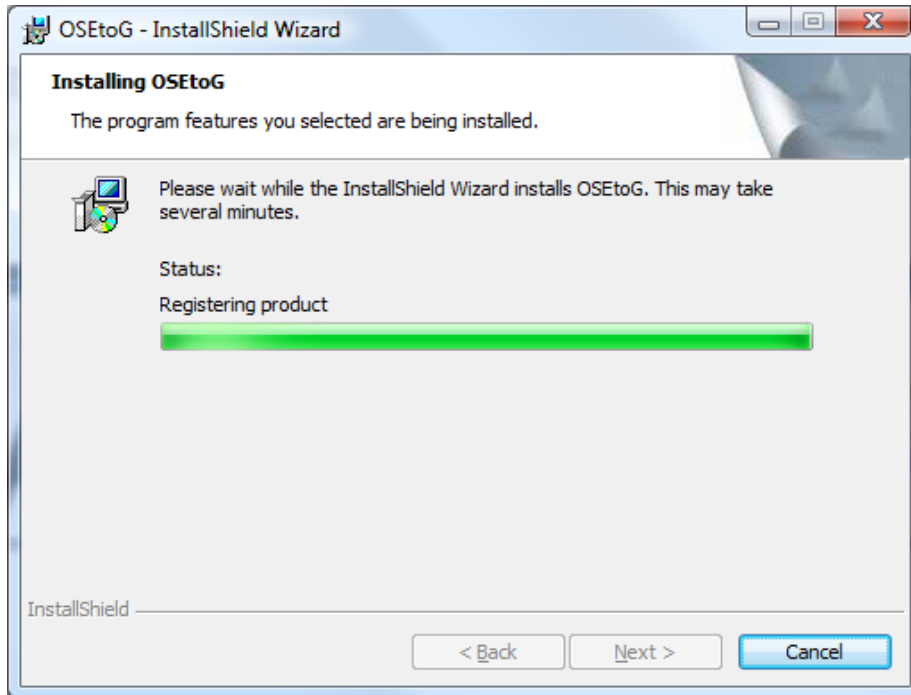


Step 7

Once the program is installed the windows below will appear. Click "Finish"

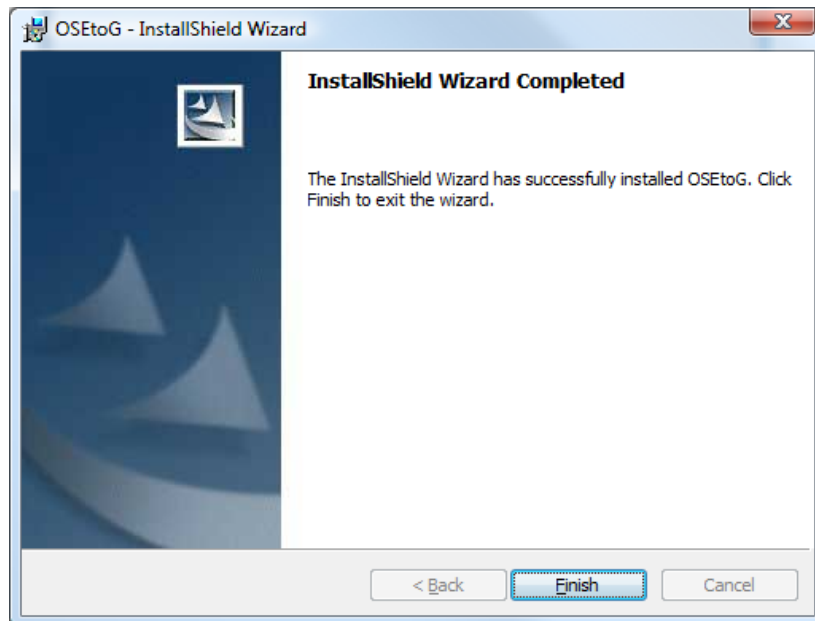


The window below indicates that OdaStat-E has been located on your PC and that the installation program for OdaStat-G (OdaStatsetup.exe) has been copied to your C:\ drive. Click "OK"

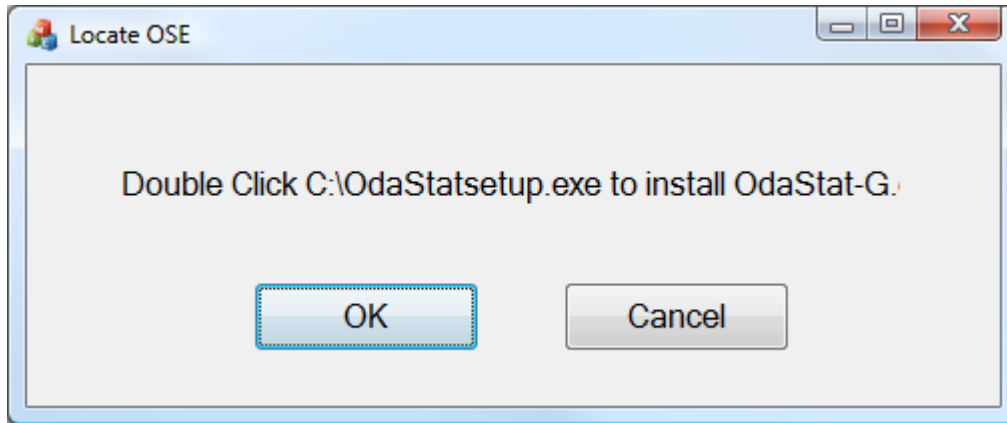

Step 8

Use "My Computer" or "Windows Explorer" to locate the file and double click the OdaStatsetup.exe file. This will begin the OdaStat-G installation process.

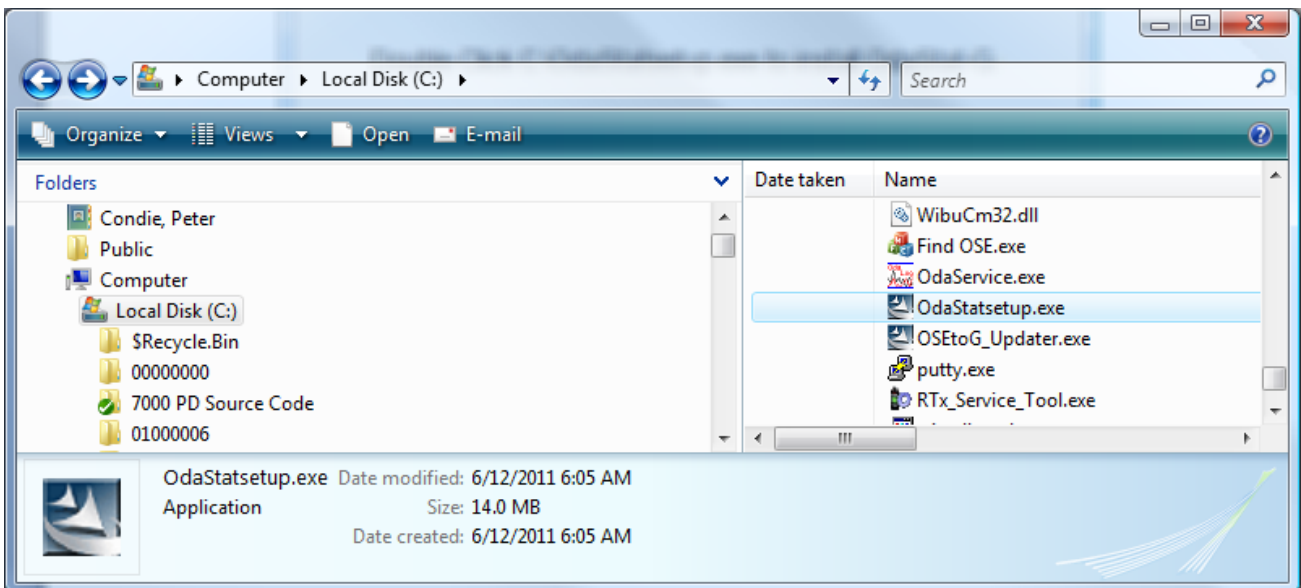

Step 8

Follow the instructions in each Window to install OdaStat-G. Once the process is complete the OdaStat-G icon will be present on your desktop.

